BENCH MOUNTED SEALERS

For foods, retail products and industrial supplies. A model for every bag size up to 36"; a jaw for every bag material and a seal as strong as the bag itself. Greater durability and operation equal to more expensive methods of sealing.

Heat indicator assists in proper temperature selection.

Red safety pilot warns operator that jaws are hot; reminds operator to turn off machine at end of day.

For minimum wear and maximum service, there's only one moving part.

Teflon™, plain metal, serrated metal.

Simple to maintain in the field.
All electrical components
easily replaced in minutes

without special tools.

Choice of jaws:

Accurate thermostat controls sealing temperature of upper and lower jaws for strong, attractive, watertight seal.

Strong I/4" seal matches bag strength; wide seal available.

All sealing jaw surfaces are heated evenly by durable heating cartridge. No hot or cold spots.

ADJUSTABLE STAND MODEL 825

(For all bench mounted sealers)
24"W x 14 1/2" D, 20-39"H, weight: 35 lbs.



All sealers seal up to length indicated.

For laminated bags with poly liner (plain jaws)

Model	Seal Width	Seal Length To:	Power
Model 230	1"	8 1/4"	110V, 400VV
Model 231	1"	10"	110V, 500VV
Model 232	"	12"	110V, 500VV
Model 233	1"	16"	110V, 600VV
Model 234	"	24"	110V, 800VV
Model 235	1"	36"	110V, 1300VV

For cellophane and polycel bags (serrated jaws)

Model	Seal Width	Seal Length To:	Power
Model 240	1"	8 1/4"	110V, 400VV
Model 241	"	10"	110V, 500VV
Model 242	1"	12"	110V, 500VV
Model 243	"	16"	110V, 600W
Model 244	 "	24"	110V, 800VV

For all polyethylene bags - Universal sealer (Teflon jaws) Model Seal Width Seal Length To: **Power** Model 250 1/4" 8 1/4" 110V, 400W Model 251 1/4" 10" 110V, 500VV Model 252 1/4" 12"


 Model 252
 1/4"
 12"
 110V, 500W

 Model 253
 1/4"
 16"
 110V, 600W

 Model 254
 1/4"
 24"
 110V, 800W

 Model 255
 1/4"
 36"
 110V, 1300W

ALL MODELS ARE SUPPLIED WITH PEDAL KIT FOR FOOT PEDAL OPERATION OF BENCH MOUNTED SEALERS

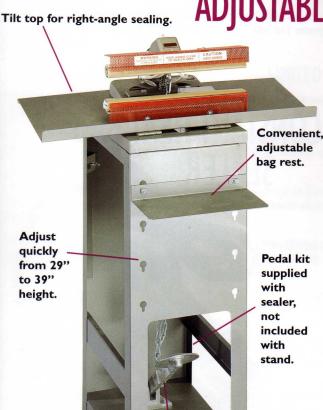

Complete foot-pedal assembly is included with all models for bench mounting.